


CONTROLS



CLEVER PRO (optional) ADVANCED PRO (standard)




COM1 and COM2 are the same type of port. Control and air curtain cables can be connected to either COM1 or COM2.

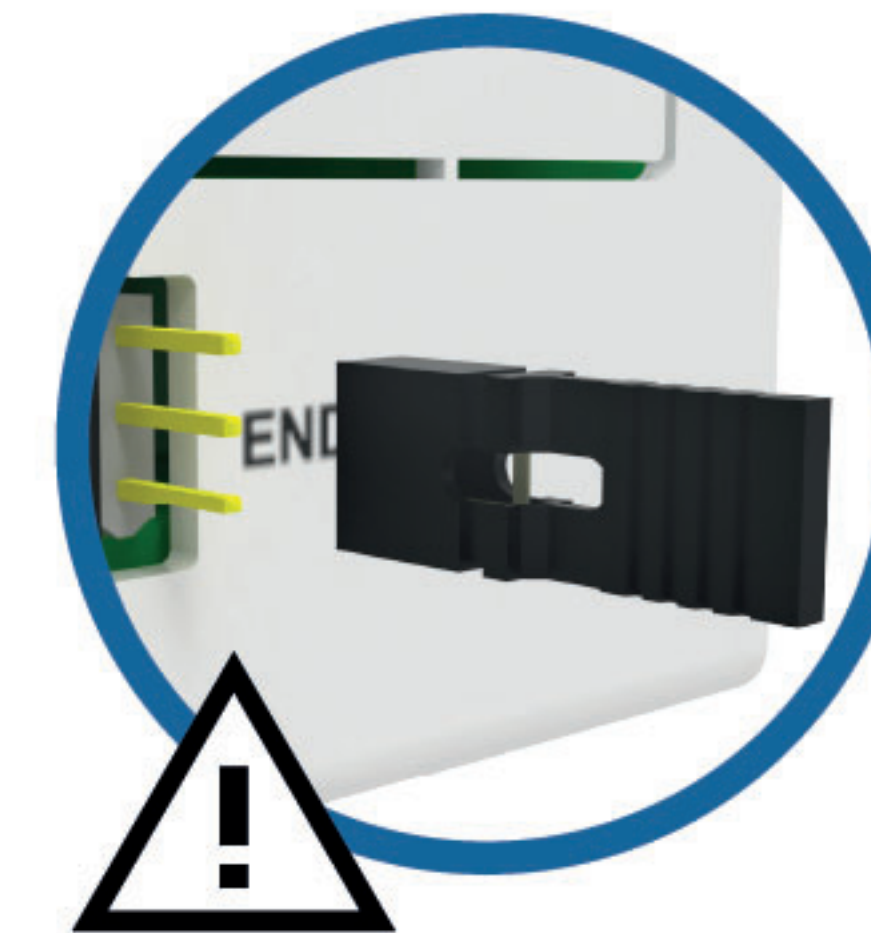


When multiple air curtains are connected to an only control, the last one must incorporate a Jumper in "END LINE" pins.

4 PINS CONNECTOR RJ11
Are used for the connection to the control and also to the slaves air curtains connected

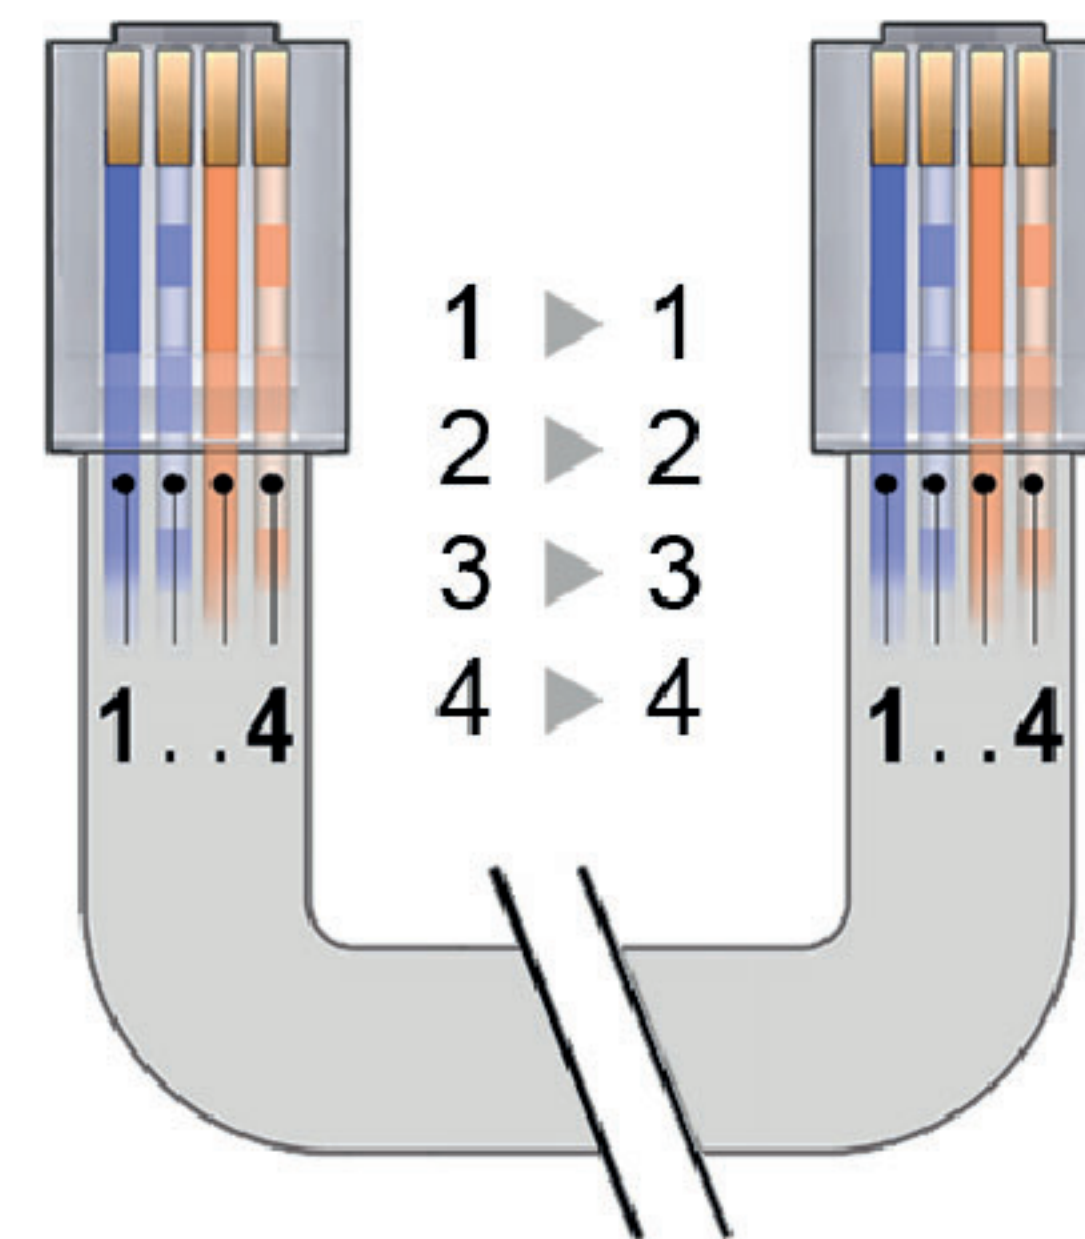


OPTIONAL VALVES:

Modulating Valve


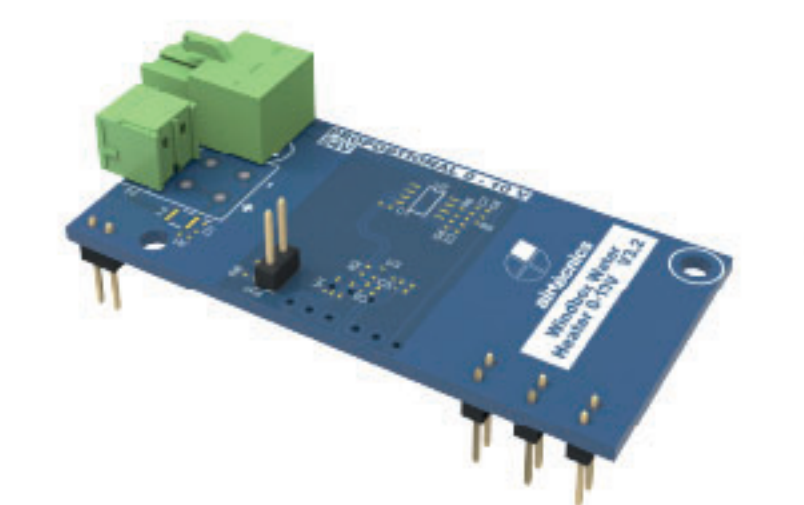


+ 0-10V - GND
+ 24VDC - GND
MOD. VALVE


ON/OFF Valve

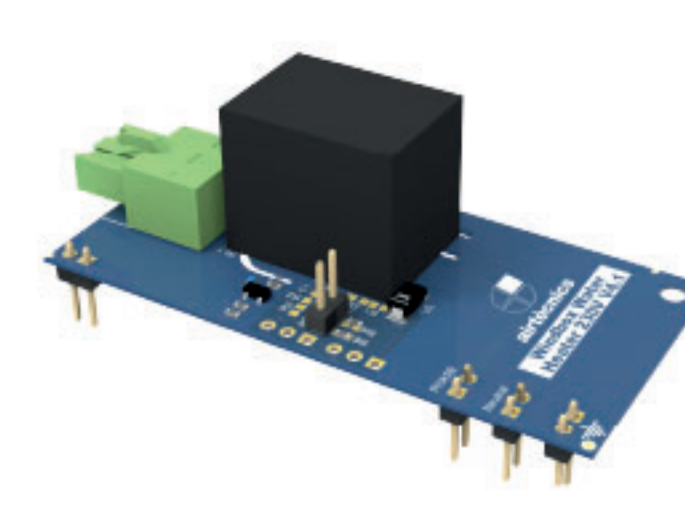

WARNING ONLY OUT SOLENOID VALVE
220-240Vx1

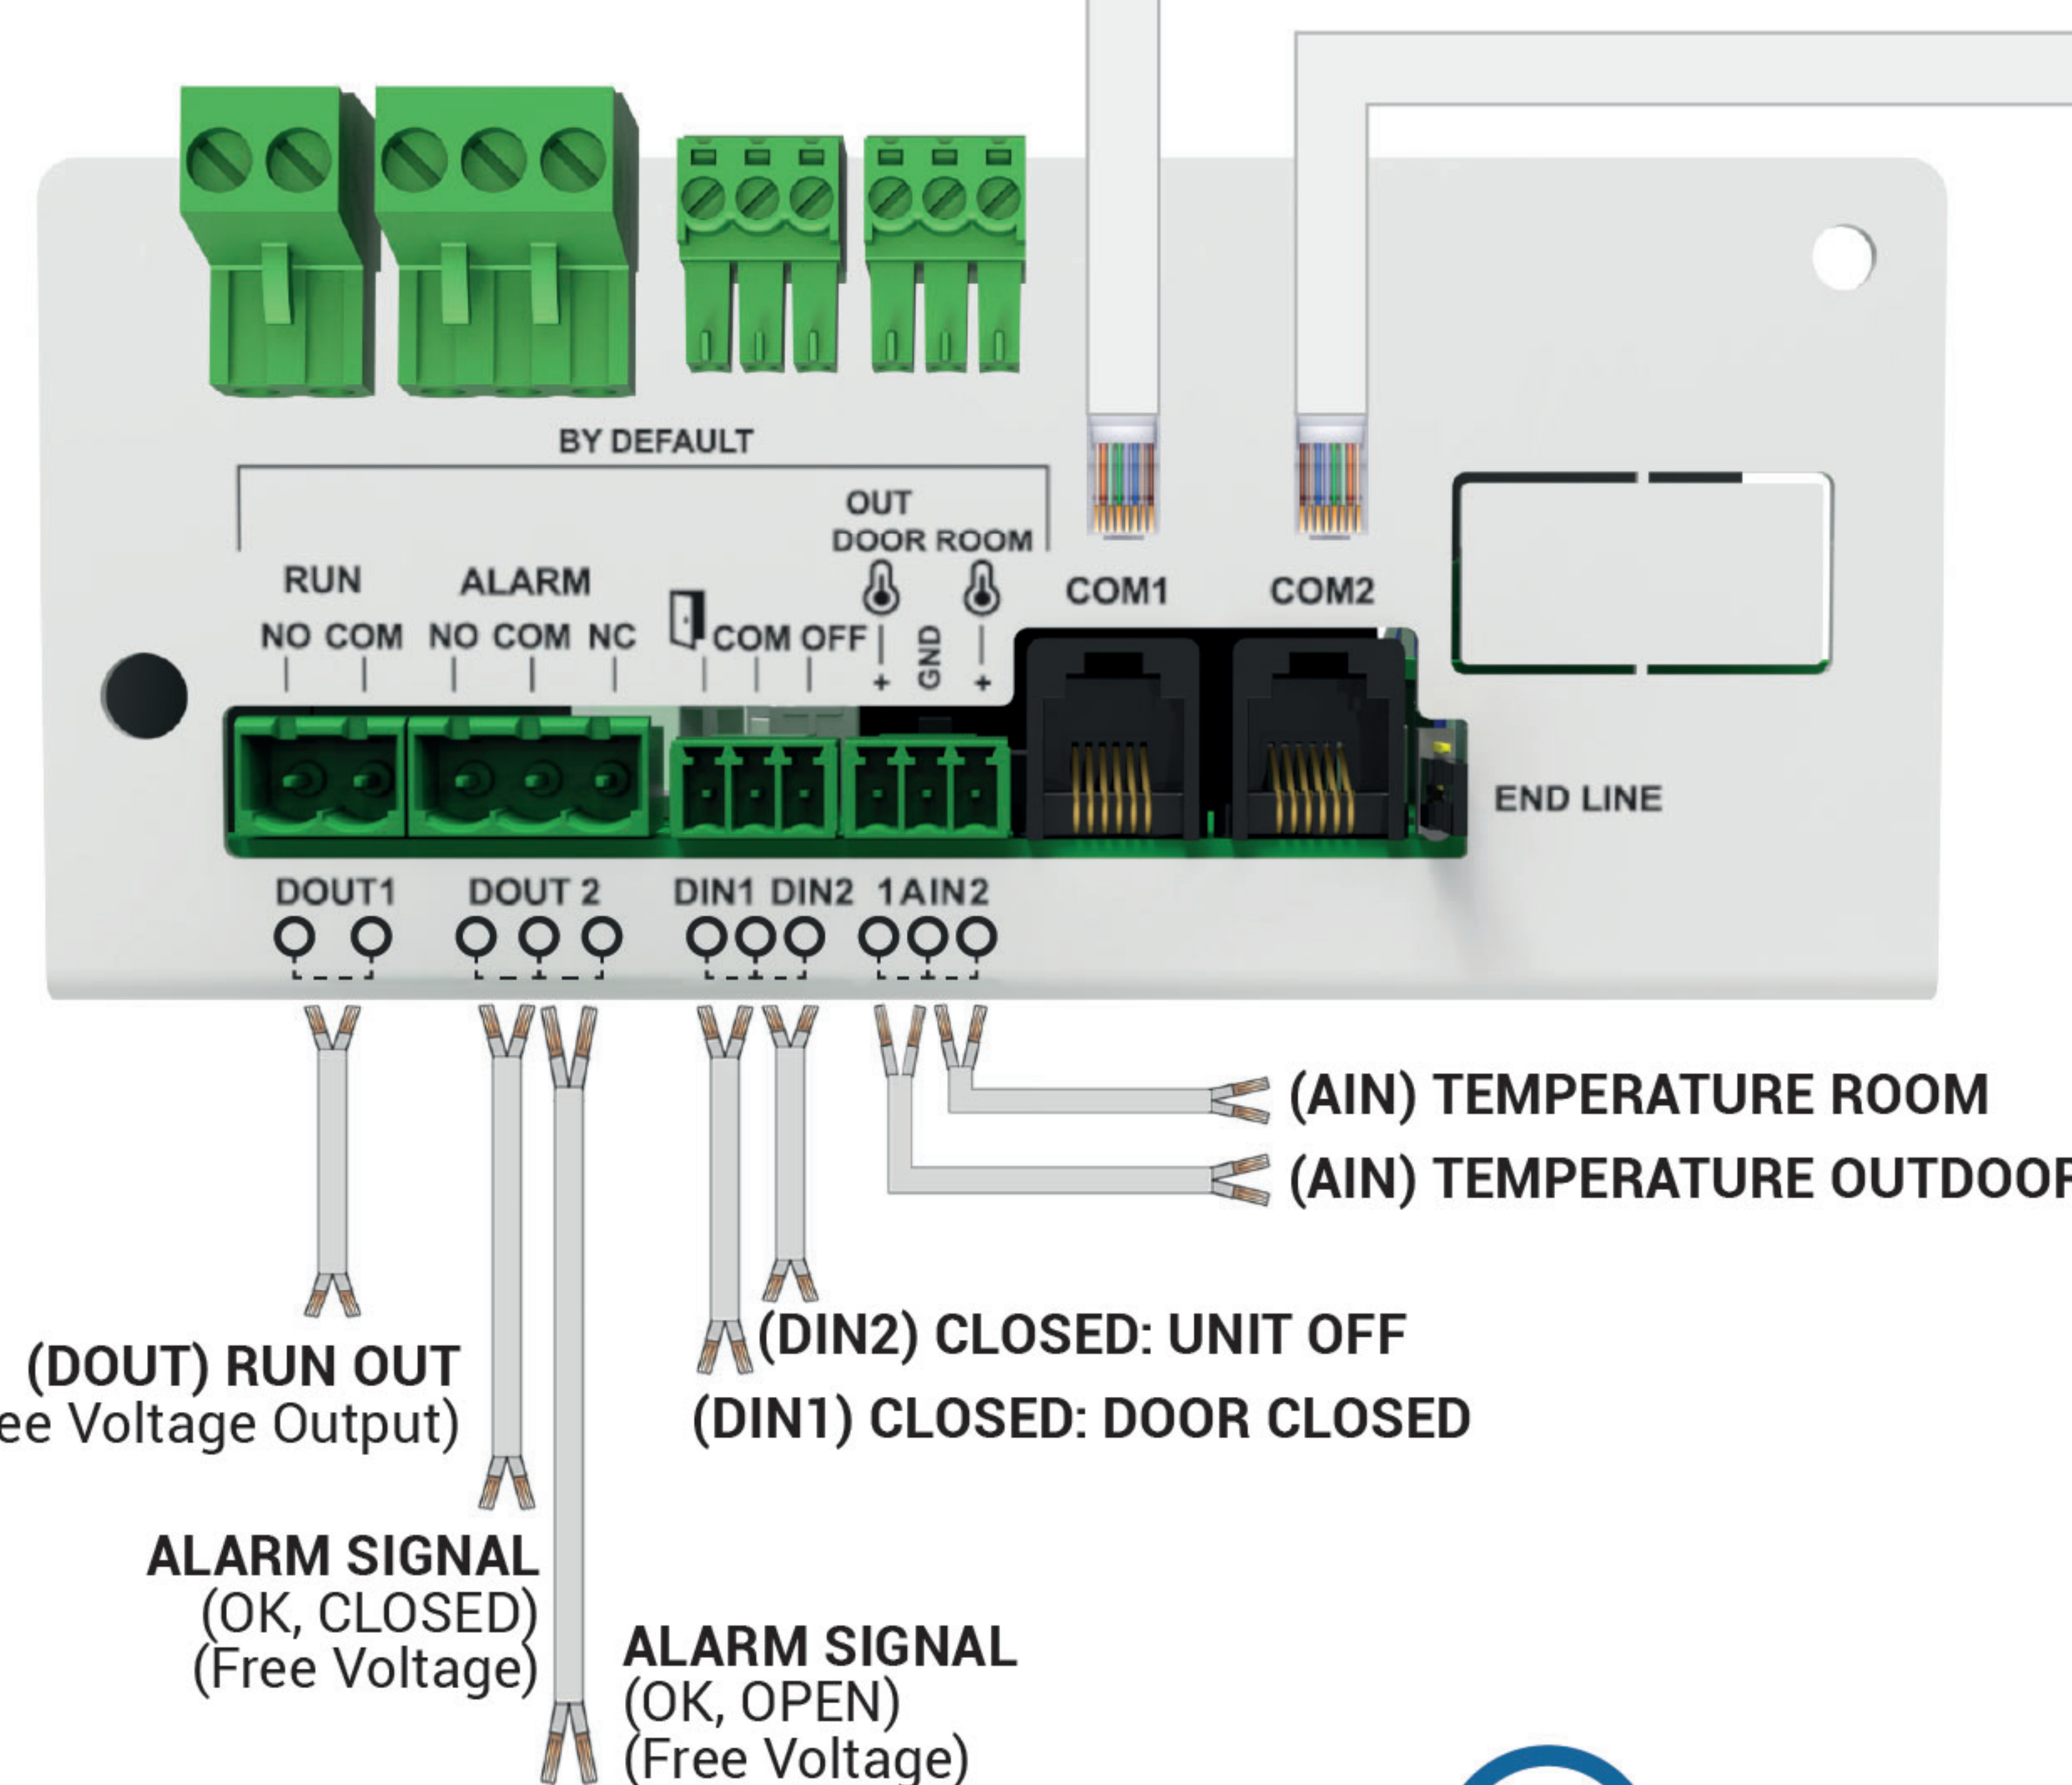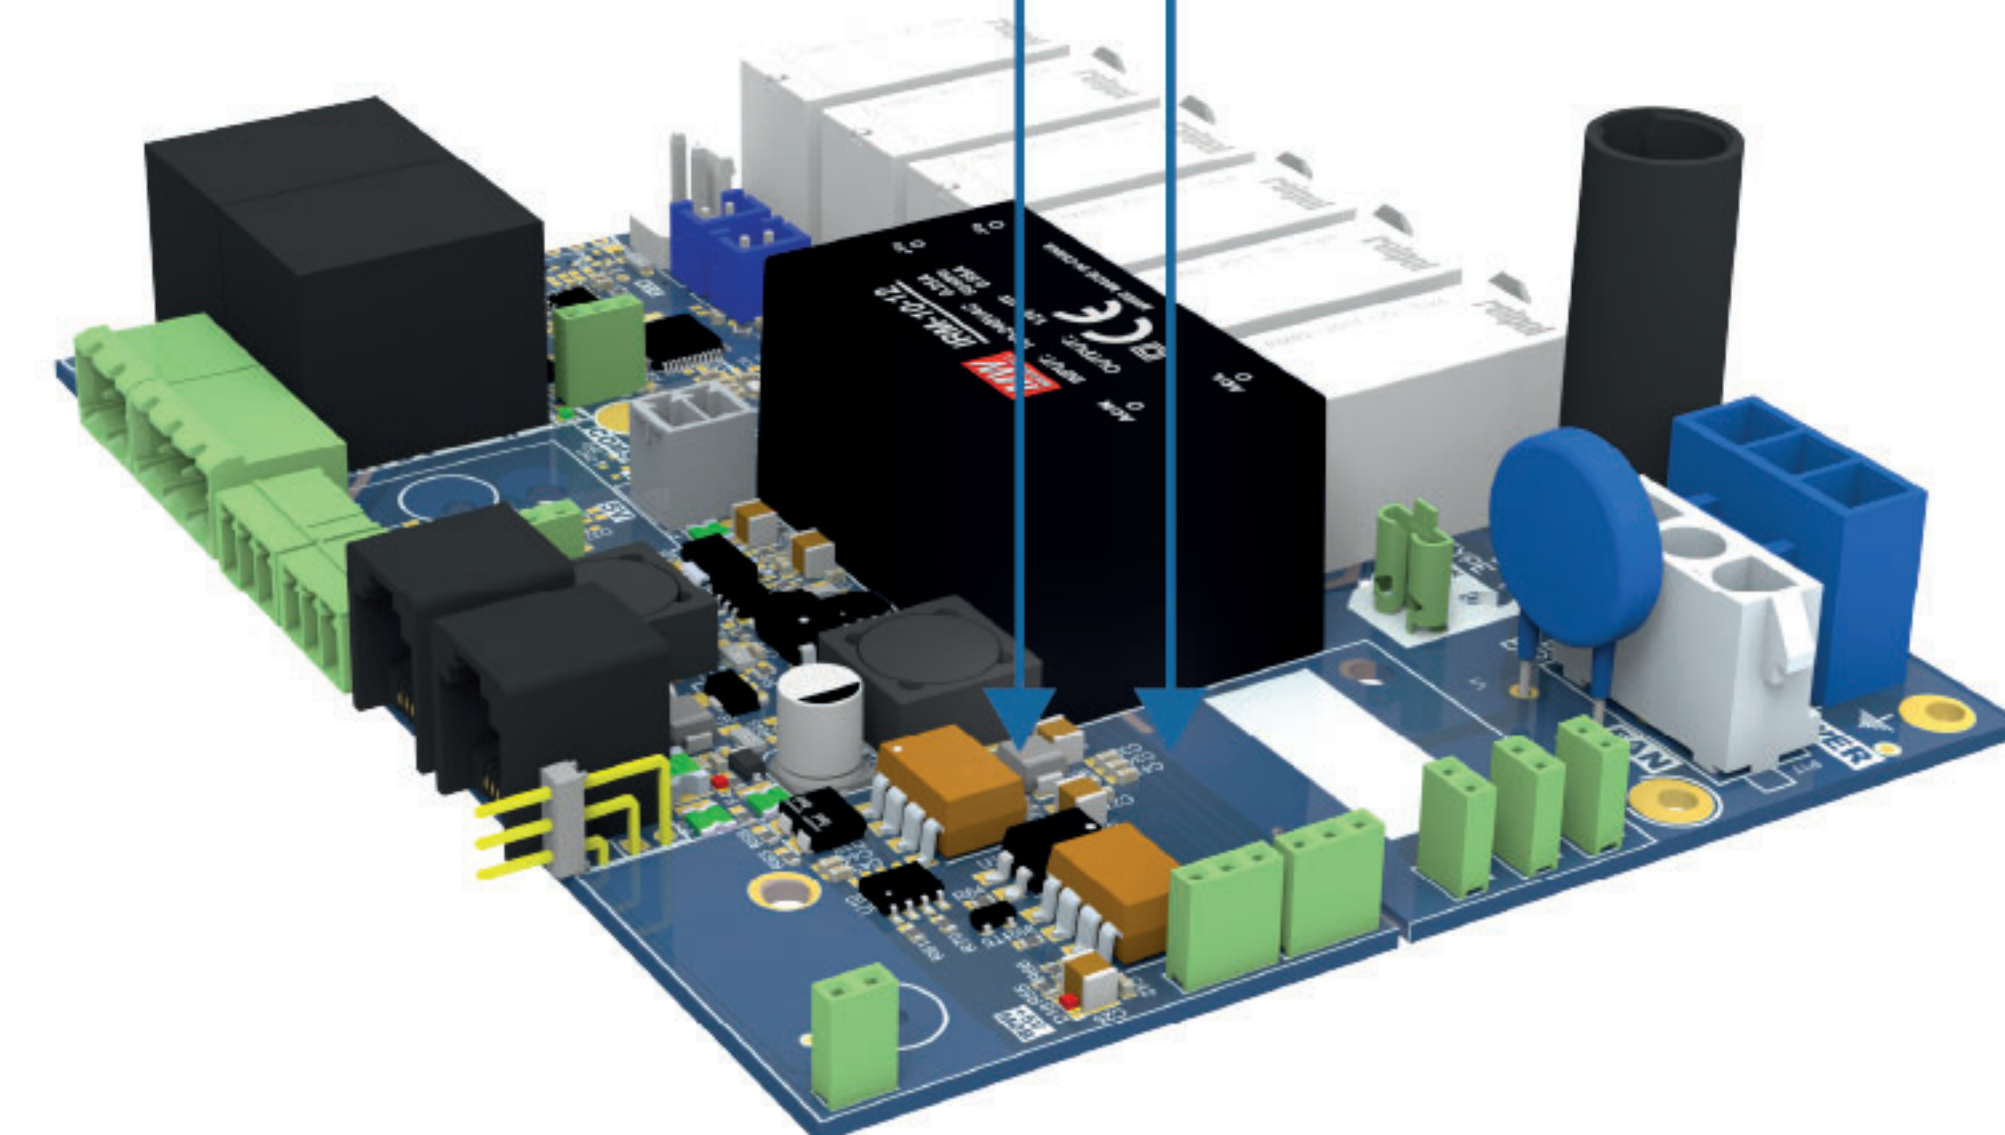

AIR CURTAIN 2 (SLAVE)

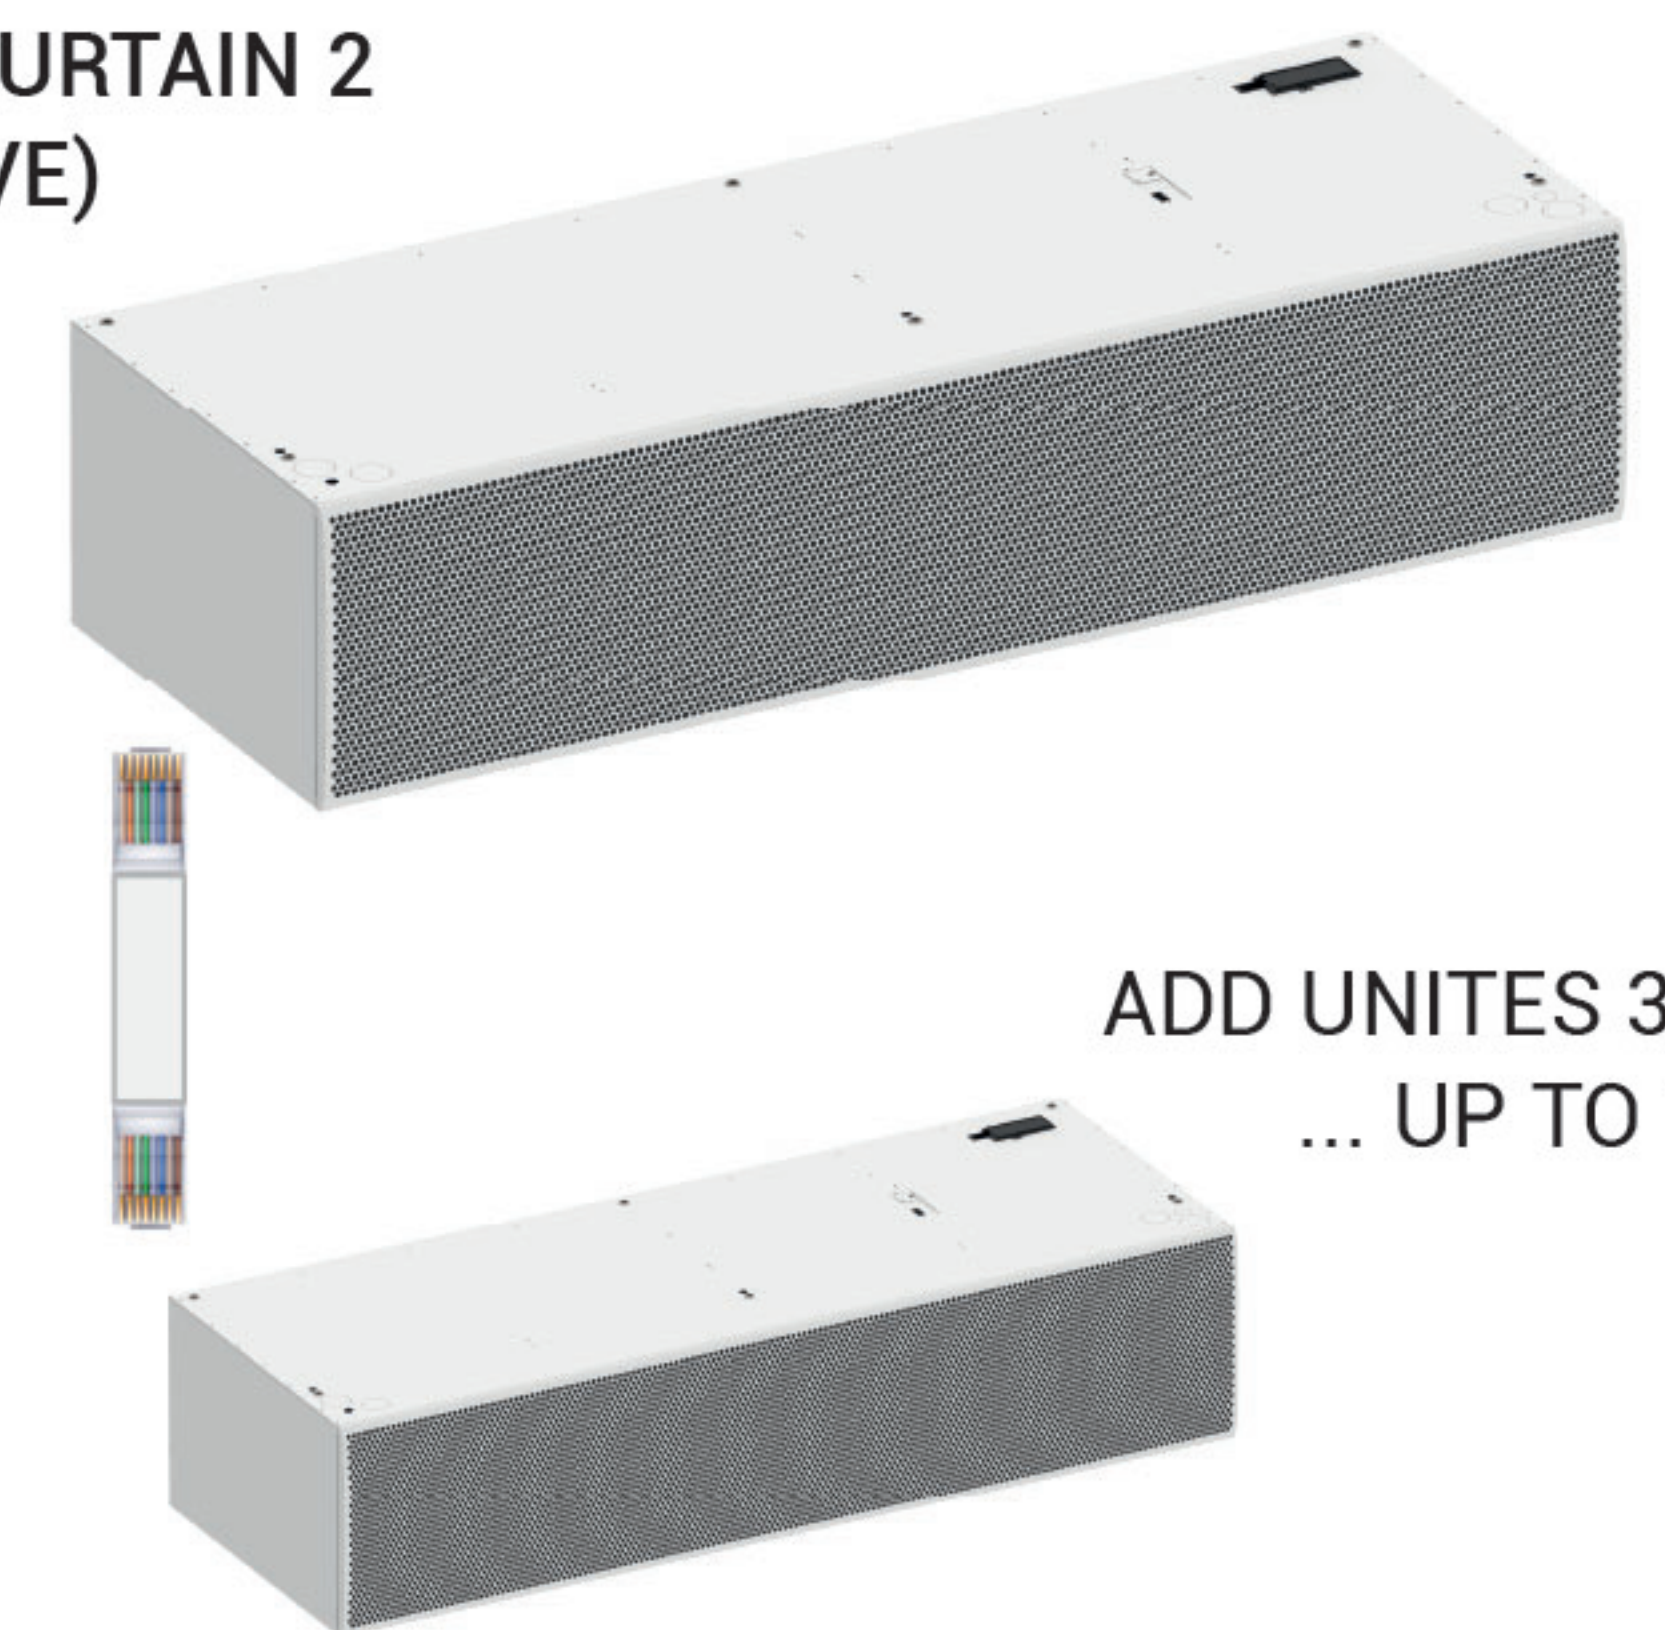


ADD UNITS 3, 4
... UP TO 12

POWER SUPPLY

1~PHASE

WATER or UNHEATED

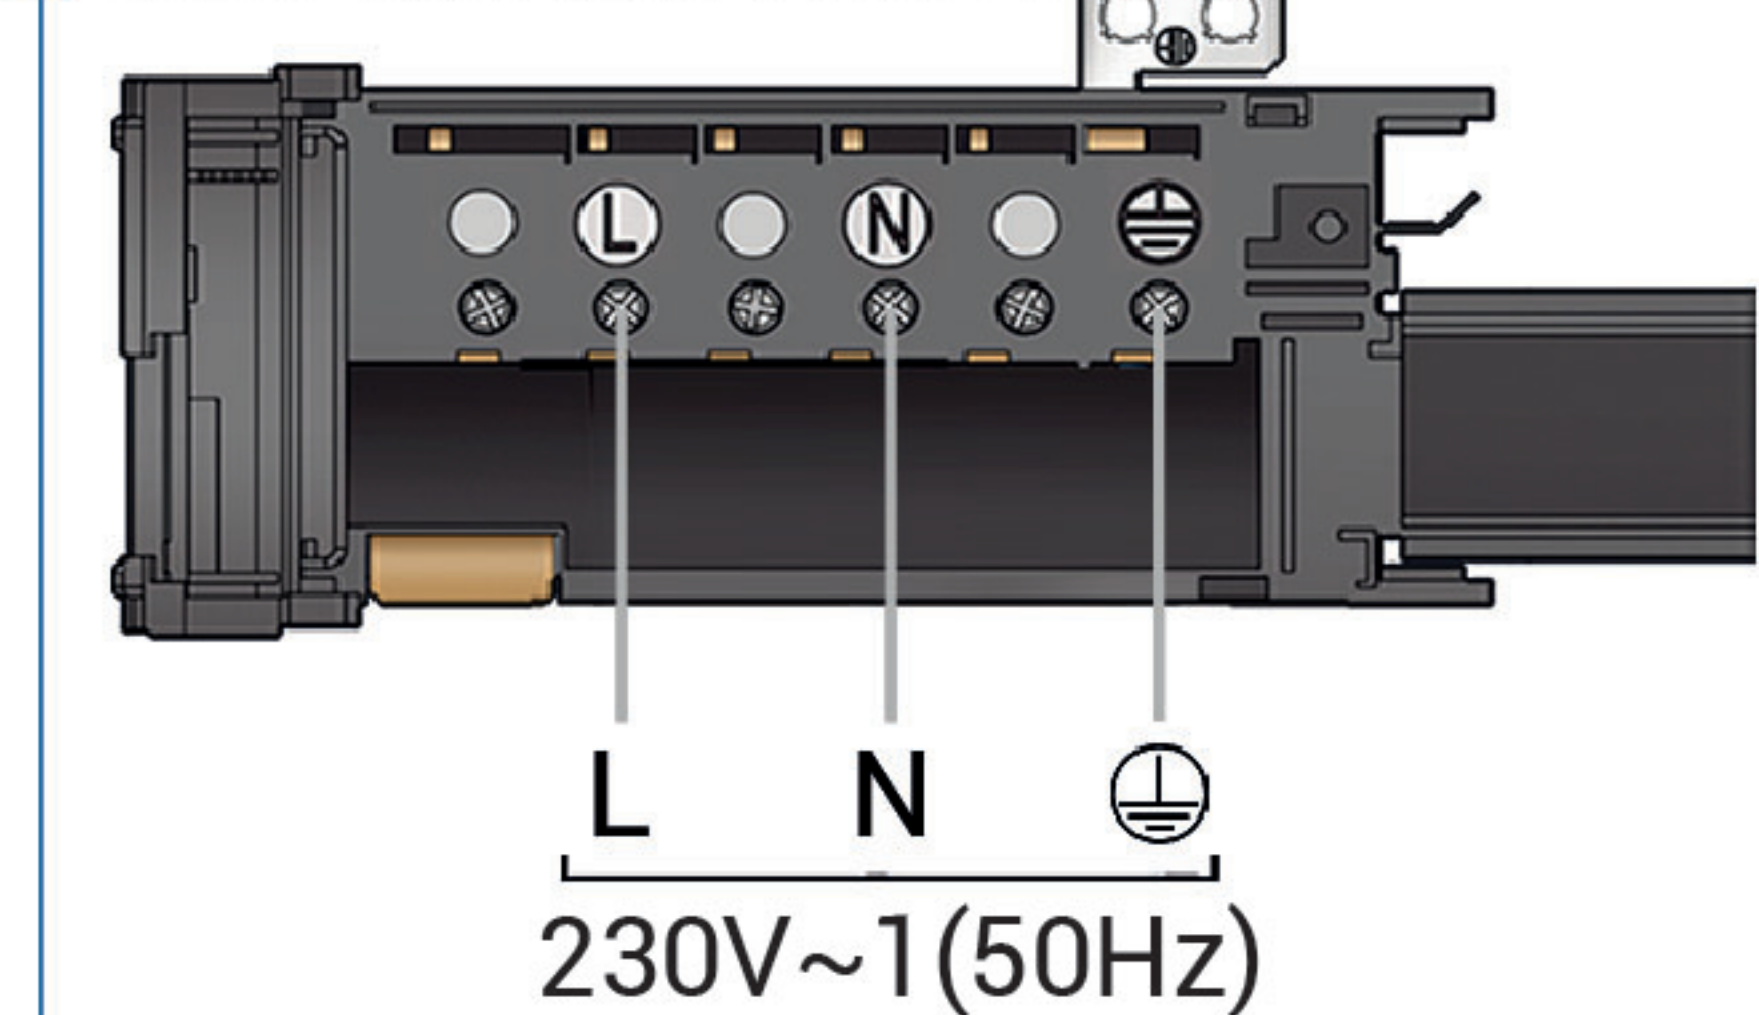

EXTERNAL CONNECTION BOX

AIR CURTAIN 1 (MASTER)