

CONTROLS



CLEVER PRO (optional)
ADVANCED PRO (standard)




COM1 and COM2 are the same type of port. Control and air curtain cables can be connected to either COM1 or COM2.



When multiple air curtains are connected to an only control, the last one must incorporate a Jumper in "END LINE" pins.

4 PINS CONNECTOR RJ11

Are used for the connection to the control and also to the slaves air curtains connected

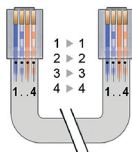


OPTIONAL VALVES:

Modulating Valve



ON/OFF Valve

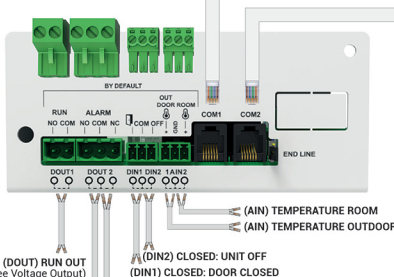

(DOUT) RUN OUT
(Free Voltage Output)

ALARM SIGNAL
(OK, CLOSED)
(Free Voltage)

ALARM SIGNAL
(OK, OPEN)
(Free Voltage)

(DIN2) CLOSED: UNIT OFF
(DIN1) CLOSED: DOOR CLOSED



AIR CURTAIN 2
(SLAVE)



ADD UNITS 3, 4
... UP TO 12

POWER SUPPLY

WATER or UNHEATED



EXTERNAL
CONNECTION BOX



AIR CURTAIN 1
(MASTER)

